



RXTA-200/300 to TXTA-200

Press and release the **Learn** button on the plug-in receiver labeled **S2**.

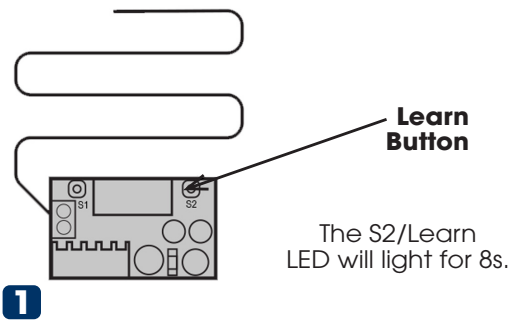

Press the button you want to pair with receiver.


When pairing is successful, the S2 Learn LED will stop flashing

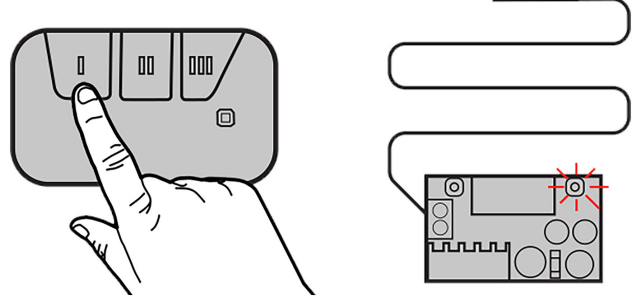


Frequencies for RXTA-300

Set the dip switches, as shown:

315 MHz

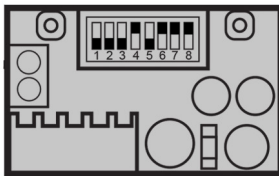


390 MHz

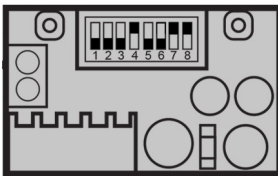

Unpair Remotes

Press and hold the **S1** and **S2** at the same time for 15s.

Both LEDs will turn off and back on when successfully cleared.

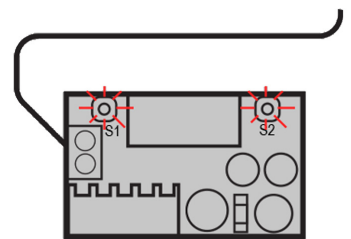

RXTA-200/300 to TXTA-KYPD



Press and hold the * and # buttons until the lights on the keypad stop blinking.




Enter a 4-digit personal identification number (PIN) of your choice:
? ? ? ?

Then press the # button.

3 Press and release the **Enter** button twice.


4 To exit programming mode, press the **0** button.

Press and release the **Learn** button on the plug-in receiver labeled **S2**.

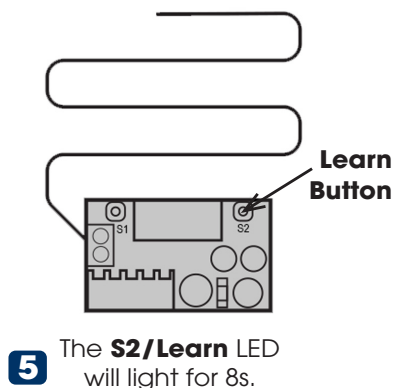

Enter the 4-digit personal identification number (PIN) programmed in step 2.


Then press and hold the **Enter** button until the **S2/Learn** LED stops flashing.

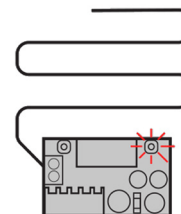

To test, press the PIN, then press the **Enter** button.


The garage door opener will activate.

7

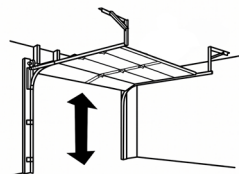

Unpair Remotes

Press and hold the **S1** and **S2** at the same time for 15s.

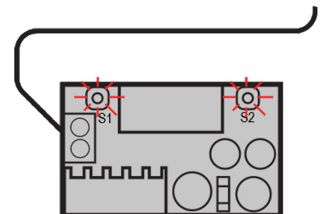

Both LEDs will turn off and back on when successfully cleared.

NOTE: Do Not press buttons too quickly or they may not register.